

supplementary

Suzuki GSX-R 600 2001-05



1) Ignition coils

- Remove fuel tank and airbox. Ignition coils coupler is located above the cylinder head. It is 6 way natural coupler with black cap - 4 Grey wires and 2 Orange/White wires. Remove plastic black cover and remove metal joint. Remove both pins with Orange/White wires by needle and insert to white plastic housing. Connect it to QS wiring harness - connector with Red wire.
- Place Yellow wires from QS wiring harness to jointing connector (instead of Orange/White wires). Put back metal joint and black cover.

2) Injectors

Disconnect 16 way Black Sumitomo connector. Remove Female pin with Yellow/Red wire from Female connector (in motorcycle main wiring harness). Insert Female pin with white wire from QS wiring harness to 16 way Black Sumitomo (where was Y/R wire). Insert Yellow/Red wire into plastic housing.

3) Gear position sensor connection

Disconnect 3pin white Sumitomo connector from GP sensor and remove female pin with Pink wire by needle. Insert female pin on QS wiring harness instead of original Pink wire. Insert motorcycle female pin to plastic house on QS wiring harness - see picture below.

4) Ground connection

Connect black wire of QS to negative terminal of battery (or to frame of motorcycle)

5) QS sensor

Connect QS sensor to QS wiring harness - black 2 pin connector

ATTENTION 1: Activate GSX-R mode if your bike light up FI red light on dashboard.
ATTENTION 1: Learn QS unit each gear position for right Multi kill Time. - page 4 - MENU C0-C6

