

Supplementary Yamaha YZF R6 1999-02



- 1) Motorcycle is equipped capacitive discharge ignition (CDI). Crankshaft position sensor is under engine cover on the right side. Sensor has 2pin black coupler under the fuel tank on the right side. Disconnect coupler and connect to both QS connector.
- 2) Connect red wire from QS unit to +12V from ignition switch. For example on output wire from fuse box.
- 3) Connect black wire from QS unit to ground (minus acu or frame).
- 4) Connect shifting sensor to QS unit. Use plastic cable ties to snap sensor cable to shifting rod.
- 5) If you want to use shifting light connect blue wire from QS unit to Y/B wire from ECU.

