

# Supplementary Kawasaki ZX6R 2007-08



## 1) Ignition coils

Disconnect connectors from ignition coils and insert connectors of QS. Order is arbitrary. Check if White/Red wire of motorcycle wiring harness is connect with RED wire of QS wiring harness.

## 2) Secondary (upper) injectors

Disconnect connectors from upper injectors and insert connectors of QS. Order is arbitrary.

## 3) Gear position sensor connection

Disconnect 3pin white Sumitomo connector from GP sensor and insert connectors from QS.

## 4) Ground connection

Connect black wire of QS to negative terminal of battery (or to frame of motorcycle)

## 4) QS sensor

Connect QS sensor to QS wiring harness - black 2 pin connector.

