

# Supplementary Yamaha FZ-1 2006-15 (S/N)



**1) Ignition coils connector:** located on the right side, above engine, beside frame - pic. (A).

- Remove Red/Black wire from female connector (unlock pin by needle). Place Yellow wire from QS unit to this position (where was Red/Black).
- Remove rubber seal in female connector corner and place Red/Black wire (female-pin) here.
- Remove rubber seal in male connector corner and place Red wire from QS unit.






Check if: a) Red/black wire from MOTORCYCLE is connected to RED from QS unit now.  
b) Red/black wire to COILS is connected with YELLOW wire from QS unit now.

**1b) Ignition coil connector:** this connection is necessary for RPM functions only

Remove Grey/Green wire from main-harness connector (female pin). Place (Blue+Violet) wire from QS unit to this place. Insert female Grey/Green into 1pin connector on Violet wire from QS unit



CONTINUE ON NEXT PAGE

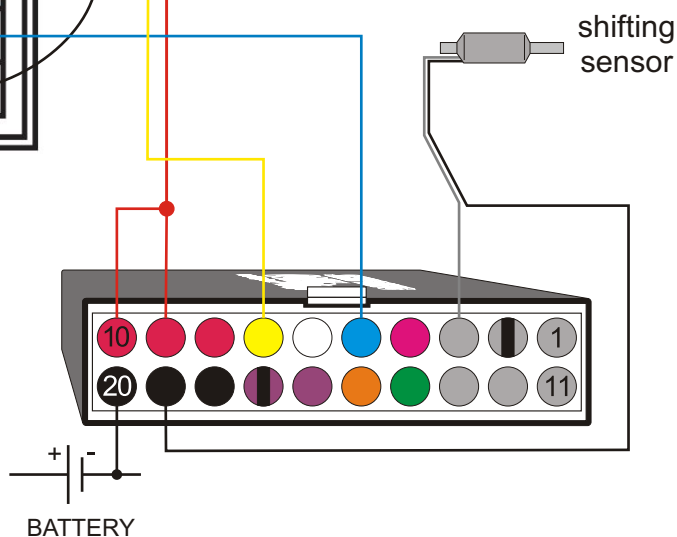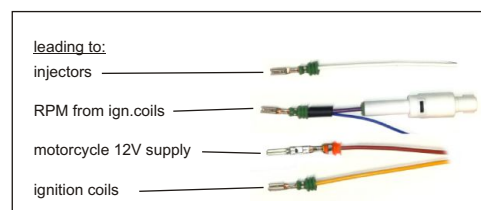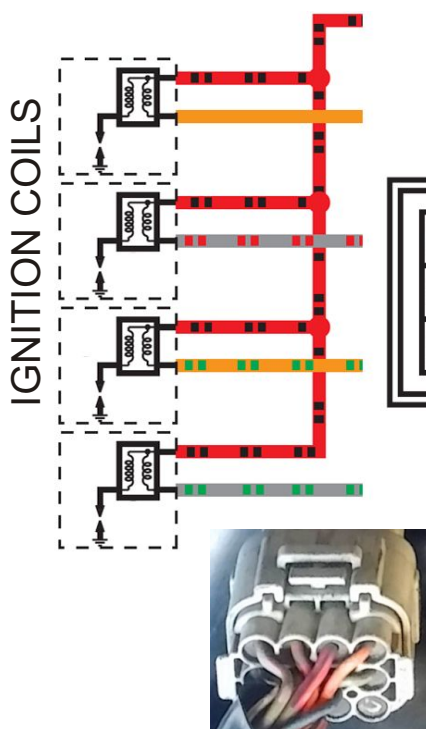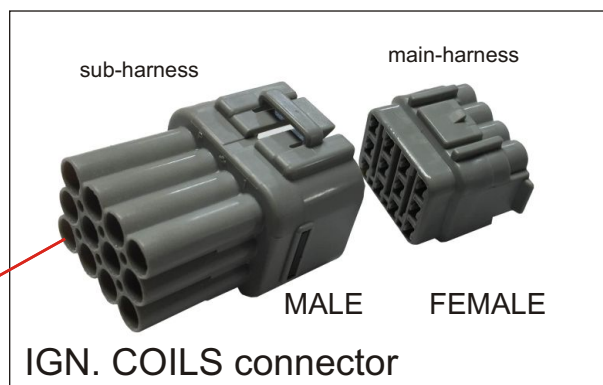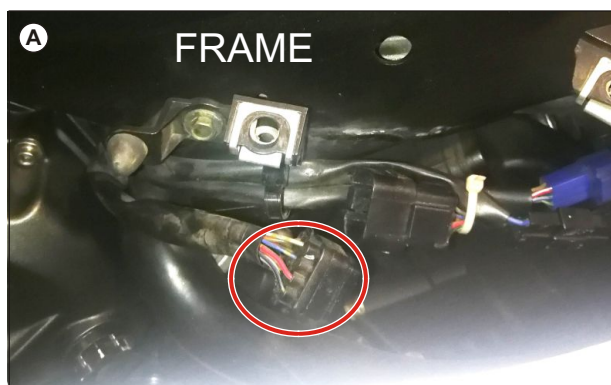

# Supplementary Yamaha FZ-1 2006-15 (S/N)





2) **Injectors connector:** located under the fuel tank - pic. (B).



Remove Red/Blue wire from main-harness connector (female pin). Remove rubber seal in same connector and place Red/Blue wire here. Place White wire (male-pin) from QS unit to free position (where was Red/Blue). White wire (male) is going to Red/blue wire (female) leading to injectors now.

3) Connect black wire from QS unit to minus terminal on battery.

4) Connect shifting sensor coupler to QS unit wiring harness - black 2pin

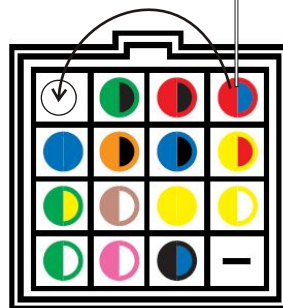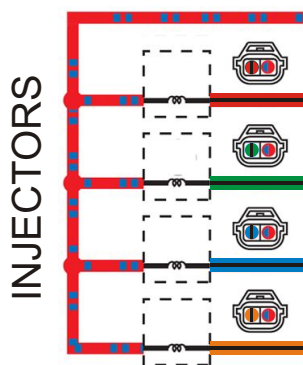

back view to female

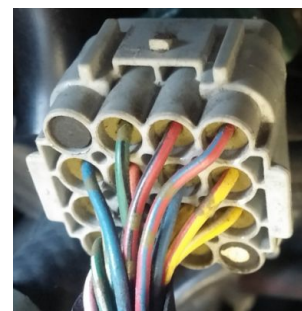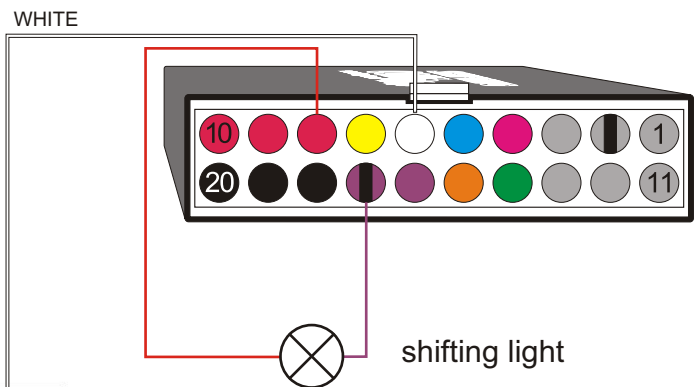

INJECTORS  
connector  
main-harness