


# Quickshifter sensor for Yamaha MT-10 from 2016


Thank you for choosing "Shifting ContRoll" QS sensor.  
Use QS sensor on closed road only.

- 1) Remove original shifting rod and install new rod with sensor - pic.1
- 2) Plug in QS connector to main harness.
- 3) Hold shifting lever in top position and turn on ignition switch for 10 sec.
- 4) "QS " on dashboard light on now pic.2

Pic. 1

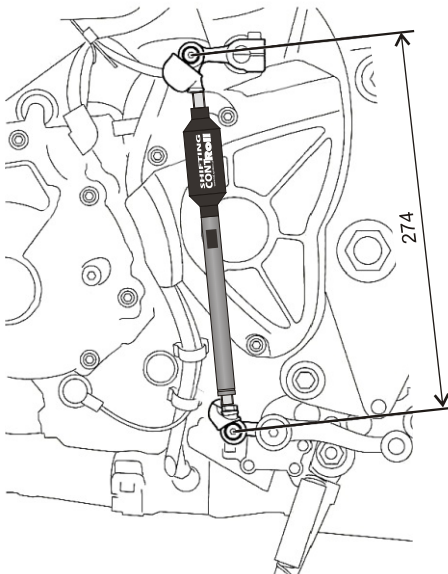

Pic. 2

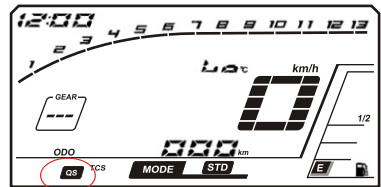

*enjoy the ride*

## Operation instruction

- Due to the competition nature of the Quickshifter, it is necessary to use a 'positive' pedal force to ensure a smooth gear change.
- The Quickshifter assembly will trigger a momentary engine cut to allow the gear to engage, without closure of the throttle or operation of the clutch.
- The Quickshifter will only operate for up-changes, the clutch must be used for down-changes.
- The Quickshifter will only operate at engine speeds greater than 2,000 rpm or motorcycle speed greater than 20km/h.
- Use the clutch when selecting first gear from neutral.