1) Ignition coils

Disconnect Red/White wire from ignition coil.

Connect Yellow wire from QS unit to ignition coil terminal and Red wire from QS unit to Red/White wire - see picture below.

2) RPM connection

Connect Blue wire from QS unit to ignition coil to Orange wire. Blue wire from QS have to be connected with O and ignition coil terminal.

3) Injector

Disconnect black 2way Sumitomo connector from injector. Insert white connector from QS wiring harness.

4) Ground connection

Connect black wire of QS to negative terminal of battery (or to frame of motorcycle)

5) QS sensor
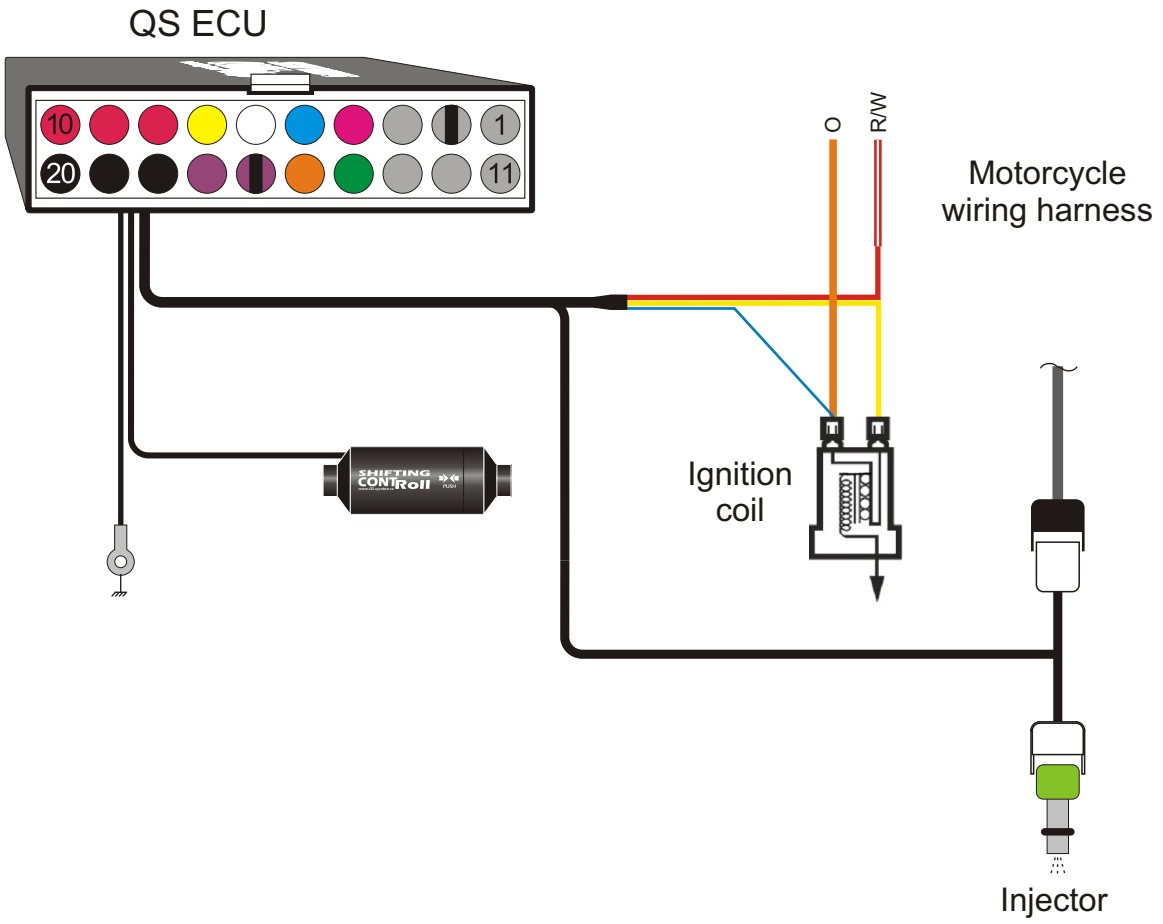
Connect QS sensor to QS wiring harness - black 2 pin connector.